

## 128 kB RAM for the Sanyo Wavy PHC-70 FD(2)

Original by: Bas Kornalijnslijper

Translated by: Bart Hamer

### Warning:


The most important part in the computer is the printed circuit board (PCB). Parts can be replaced, but not the PCB. Do not try to unsolder the parts, but cut them loose and then remove the solder pins. The use of IC sockets is recommended.



Sanyo Wavy PHC-70FD MSX-2+ computer.

### Requisites:

- 2 pieces 41464 (or equivalent)
- 2 pieces capacitor 100 nF

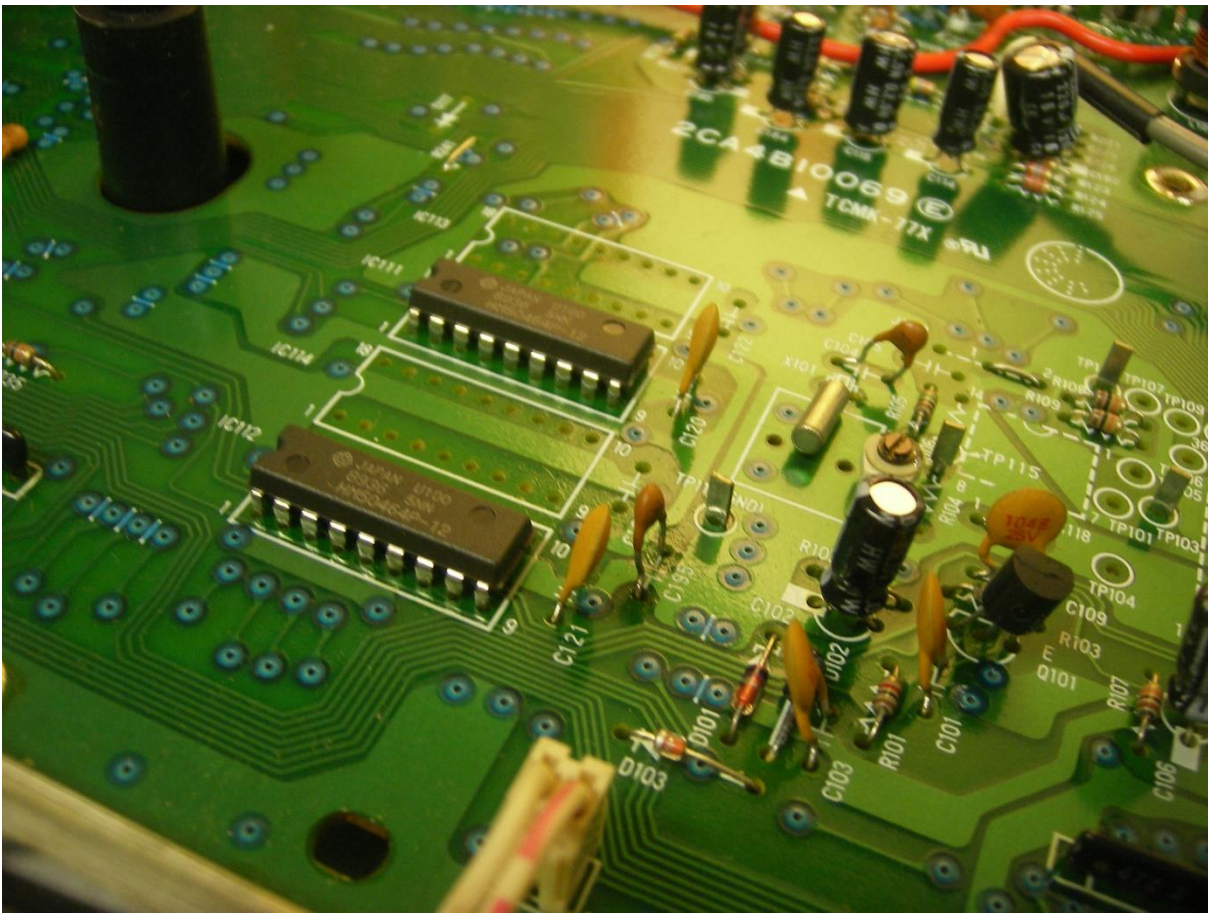


64 kB RAM memory.

### Installation:

- Remove the top of the case.
- Remove the keyboard.
- Remove the metal shielding plate.
- Place a 41464 in the empty place of IC113.
- Place a 41464 in the empty place of IC114.
- Place a 100 nF capacitor in the empty place of C122.
- Place a 100 nF capacitor in the empty place of C123.
- Change wire bridge J1102 to 1-2.



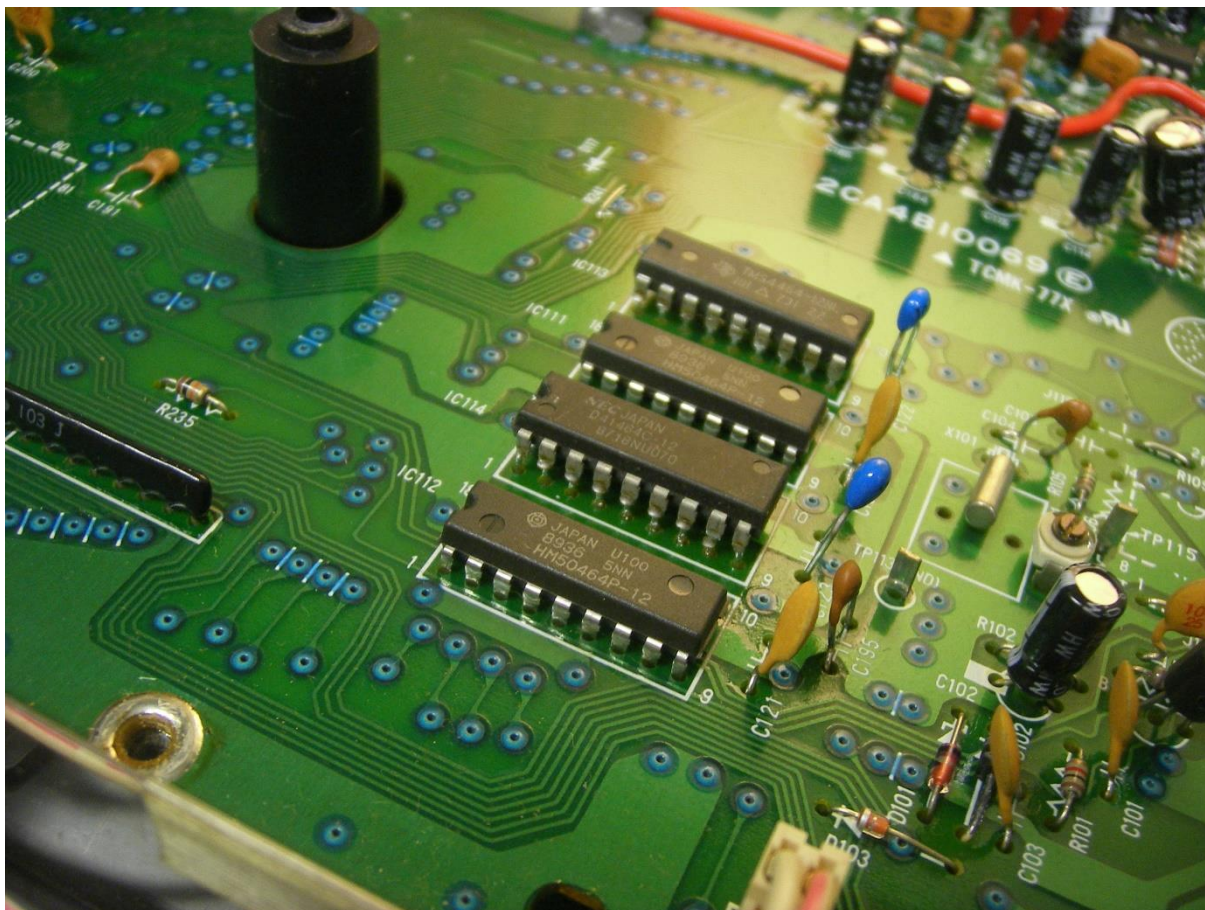

128 kB RAM memory.