Turbo 7 MHz for the Philips NMS 8245 MSX-2 Computer

Original by: Bas Kornalijnslijper Translated by: Bart Hamer

Marning:


The most important part in the computer is the printed circuit board (PCB). Parts can be replaced, but not the PCB. Do not try to unsolder the parts, but cut them loose and then remove the solder pins. The use of IC sockets is recommended.

Upgrade package contents:

- Completely pre-assembled expansion board
- 40-pin IC socket
- Switch with led
- Resistor array (2K2)
- Insulating material (shrink tubing)
- Thin wire



The Philips NMS 8245 MSX-2 computer.

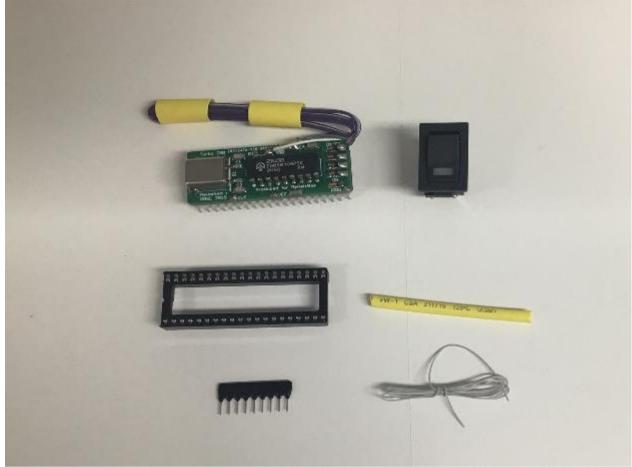

The contents of the upgrade package.

Installation:

- Remove the cover (4 screws and 1 cable).
- Remove the keyboard (2 cables and 1 earth wire).
- Remove the video PCB (2 screws and 1 cable).
- Remove the disk drive (2 screws and 2 cables).
- Remove the motherboard (4 screws and 1 cable).
- Remove U1 (Z80).
- Remove R57 (47Ω).
- Remove R82 (47Ω).
- Make a connection between R57 (plastic support side) and R82 (TP15 side).
- Place the 40-pin IC socket in place of U1 (Z80).
- Place the Turbo 7 MHz expansion board in the IC socket.
- Make a connection between TP10 and one of the free diodes on the Turbo 7 MHz expansion board.
- Mount the switch with LED in the top cover or another place of your choice.
- The red or white wire is the positive side of the LED.
- The brown or black wire is the negative side of the LED.
- The orange/yellow or gray/purple wire pair is for the switch.
- Insulate the solders with a piece of shrink tubing.
- The resistor array (2K2) is not used.

Testing the Turbo 7 MHz:

The operation of the Turbo 7 MHz can be tested with the following BASIC test program:

10 FOR I=1 TO 100 20 FOR J=1 TO 100: PRINT J;: NEXT J: NEXT I